



To attach a video camera or digital camera to your Plasma. . .

To set up the camera:

You will need a cord to attach the device to either the VCR/DVD or Plasma. This cord fits into the camera and has 3 plugs on the other end. There is a yellow, red, and white plug. The yellow being video connection and the red and white are audio connections.

The connections for both the Plasma and DVD/VCR are on the front. The connections on these devices are clearly marked by color as to which plug goes there.

Junior High / High School - you can plug into the VCR/DVD or Plasma. The connections for both are on the front. The connections on these devices are clearly marked by color as to which plug goes there.

Elementary Buildings - The easiest connection will be through the VCR/DVD. The plugs are on the front of the VCR/DVD and clearly marked. The connection for the Plasma, is in the middle, on the underside. These connections are also clearly marked, but they are awkward to find and use.

To use the camera on the Plasma:

The Plasma itself needs to be placed on Auxiliary, to get there, it is one channel lower than channel 2. Push play on the VCR/DVD and it should work.

Digital cameras and video camera can be found in the PHS/PJHS, Portsmouth Elementary, and East Portsmouth Elementary libraries.

Suggestions for use:

photos of student projects, photos of students working in your classroom for parent teacher conf (let it loop), show field trip pictures, pictures of places you've traveled as it relates to your curriculum

